

ARCTIC CAT®

SEAT COVER-0436-686, 0436-687, 0436-688, 0436-783, 1436-247

Check for the following parts before beginning installation: 1 Seat Cover

INSTALLATION INSTRUCTIONS

1. Remove the seat, as per instruction manual.
2. Place the seat cover over the front of the seat.
3. Pull the back end of the cover over the seat.
4. Connect the velcro strap under the seat.
5. Reinstall the seat.
6. Readjust strap, if necessary.

IS043668688/R2

8-18-08

ARCTIC CAT®

SEAT COVER-0436-686, 0436-687, 0436-688, 0436-783, 1436-247

Check for the following parts before beginning installation: 1 Seat Cover

INSTALLATION INSTRUCTIONS

1. Remove the seat, as per instruction manual.
2. Place the seat cover over the front of the seat.
3. Pull the back end of the cover over the seat.
4. Connect the velcro strap under the seat.
5. Reinstall the seat.
6. Readjust strap, if necessary.

IS043668688/R2

8-18-08

ARCTIC CAT®

SEAT COVER-0436-686, 0436-687, 0436-688, 0436-783, 1436-247

Check for the following parts before beginning installation: 1 Seat Cover

INSTALLATION INSTRUCTIONS

1. Remove the seat, as per instruction manual.
2. Place the seat cover over the front of the seat.
3. Pull the back end of the cover over the seat.
4. Connect the velcro strap under the seat.
5. Reinstall the seat.
6. Readjust strap, if necessary.

IS043668688/R2

8-18-08

ARCTIC CAT®

SEAT COVER-0436-686, 0436-687, 0436-688, 0436-783, 1436-247

Check for the following parts before beginning installation: 1 Seat Cover

INSTALLATION INSTRUCTIONS

1. Remove the seat, as per instruction manual.
2. Place the seat cover over the front of the seat.
3. Pull the back end of the cover over the seat.
4. Connect the velcro strap under the seat.
5. Reinstall the seat.
6. Readjust strap, if necessary.

IS043668688/R2

8-18-08

ARCTIC CAT®

SEAT COVER-0436-686, 0436-687, 0436-688, 0436-783, 1436-247

Check for the following parts before beginning installation: 1 Seat Cover

INSTALLATION INSTRUCTIONS

1. Remove the seat, as per instruction manual.
2. Place the seat cover over the front of the seat.
3. Pull the back end of the cover over the seat.
4. Connect the velcro strap under the seat.
5. Reinstall the seat.
6. Readjust strap, if necessary.

IS043668688/R2

8-18-08