



Installation Instructions YAMAHA BOW TENT 230 SERIES

Please read and understand the instructions completely before installation to avoid any possible injury to yourself or damage to the accessory or your boat.

DEALER: These instructions contain important information for future reference and must be given to the customer.

1. PARTS LIST:

ITEM	PART NAME	QTY
1	INSTRUCTION SHEET	1
2	YAMAHA BOW TENT	1
3	MARKING TEMPLATE	1
4	SNAP LOOPS	2
5	SCREWS 1 1/2"	4
6	SCREW SNAPS	6
7	SUPPORT POLES 1-LONG 2-SHORT	3
8	SELF-ADHESIVE VELCRO	2

Study the illustrations on the following page thoroughly before proceeding.
The instructions must be followed in the order specified below.

2. INSTALLATION:

FRAME INSTALLATION:

At the rear of the bow, place the marking template on the starboard side next to the windshield matching to the shape. Draw in the location of the snap loop drill holes.

Flip the template over and repeat for the port side.

Tape and pre-drill 1/8" holes to install the snap loops.

BOW TENT INSTALLATION:

Place the front webbing loops around the two front cleats.

Unwrap and assemble the long pole (simply straighten and put them together.) Place the long pole through the material pockets and the webbing loops and connect the velcro wrap around the pole.
Connect the snap hook on the webbing to the footmans loop.

Assemble the short pole and install it into the rear port plastic block, then into the front plastic corner. diagonally on the long pole.

Repeat for the opposite side forming an "X" with the poles in the front of the tent.

Connect the webbing/buckle straps on the tent around the bow rail and cinch evenly.

Note where snaps fall on the edge of the cover. Mark location of snaps. Using 1/8" drill bit drill and install the screw snaps.-**NOTE:** It is recommended to use tape to not crack the fiberglass when drilling.

Note where self-adhesive velcro falls on the bottom of the door when zipped completely shut. Clean noted area with isopropyl rubbing alcohol and allow to dry. Peel backing of sel-adhesive velcro and adhere to area. Maximum velcro adhesion will occur in 24 hrs. at room temp.

WARNING:

DO NOT USE ENCLOSURE WHILE BOAT IS IN USE DUE TO OBSTRUCTED VIEW.
DO NOT USE IN WINDS OVER 30 M.P.H.

YAMAHA BOW TENT MARKING TEMPLATE

GENUINE
Parts & Accessories

