


# Arctic Cat® ATV

## Installation Instructions - Accessory Kit

### Fender Cover (B-Body Style)

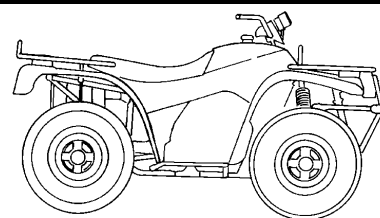

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.


#### Kit includes:

p/n	QTY	DESCRIPTION
0436-807	1	Fender Cover Kit (Hardwood Pattern)
0436-808	1	Fender Cover Kit (Timber Pattern)
0436-809	1	Fender Cover Kit (MAX-4 Pattern)
0453-373	1	Instructions

### Installing Fender Cover

1. Remove the seat; then remove the hardware securing the front and rear racks. Remove the racks. See Fig. 1.

Fig. 1

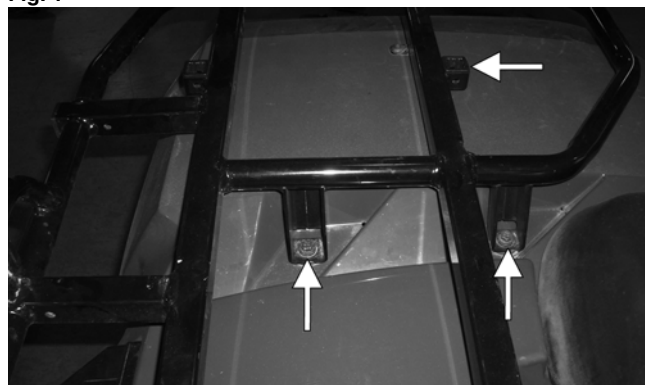

ATV-027A

2. Open the Velcro located near the front mesh of the fender covers; then drape the cover over the handlebar.
3. Note the location where the adhesive Velcro will be secured around the shift lever; then using isopropyl alcohol, clean the noted area and allow to dry. Remove the self-adhesive backing from the Velcro; then affix the Velcro to the installation area.

■ **NOTE:** Allow 24 hours for the adhesive to dry at room temperature.

4. Remove the inner, outer, and center fender flare hardware in the area where the lower section of the cover will be installed. See Fig. 2.

Fig. 2



ATV-028

5. Install the J-channels around the perimeter of the ATV.
6. Secure the rear of the cover around the perimeter of the ATV.
7. Insert the plastic tabs to secure the cover near the headlight.
8. Reinstall the fender flare hardware removed in step 4.

■ **NOTE:** The fender flare hardware must go through the cover and plastic.

9. Take note of where the adhesive Velcro will be attached under the seat and the front of the seat (for zipper opening). Using isopropyl alcohol, clean the installation area and allow to dry. Secure the Velcro to the ATV.
10. Reinstall the racks and seat.

### Installing Pod Cover

1. Temporarily position the pod cover onto the pod and take note of where the Velcro will be installed. Remove the pod and clean the installation area with isopropyl alcohol. Allow the area to dry.
2. Remove the threaded accessory plug nut; then turn the accessory plug to the unlock position and pull outward on the plug enough to allow the pod cover to be installed under the plug. See Fig. 3.

Fig. 3



ATV-029

■ **NOTE: It is not necessary to remove the pod.**

3. With the cover tucked under the plug, turn the plug back to the locked position.
4. Starting at the front, pull the cover over the pod.
5. Pull the pockets (located at the bottom rear of the pod cover) over the bottom rear plastic corners.

6. Adjust the Velcro and seams to align with the contours of the pod.
7. Carefully reinstall the nut being careful not to twist the cover as the nut is tightened.

## Maintenance

1. Periodically thoroughly clean the cover and ATV to prevent dirt and debris from getting under the cover. When cleaning the cover, use a mild soap.
2. Avoid storing in direct sunlight for prolonged periods of time. When storing the ATV w/cover outside, use a storage cover.

### **CAUTION**

**Avoid spilling gas onto the cover. Damage to the cover may occur. Avoid storing in direct sunlight for prolonged periods. Damage due to prolonged exposure cannot be warranted.**

