


# Arctic Cat® UTV

## Installation Instructions - Accessory Kit

### Prowler Soft Top Kits (p/n 0436-973 and 0436-974)

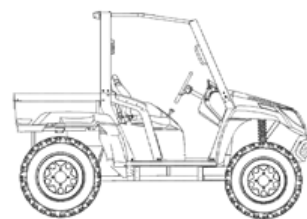

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application: 2006-2008 Prowler/Prowler XT/XTX Models

##### Kit includes:

p/n	QTY	DESCRIPTION
1441-561	1	Soft Top (Max-4 Camo) *
1441-555	1	Soft Top (Black) **
1441-562	2	D-Ring
0453-430	1	Instructions

\* Included in Kit (p/n 0436-973)

\*\* Included in Kit (p/n 0436-974)

1. Drape the soft top over the top of the canopy tube framework with the cutout in the material aligned with the brakelight.
2. Thread the webbed straps around the center horizontal headrest crossbar.
3. Thread the webbed straps through the ladder lock buckle. Tighten the cinch evenly.
4. Remove the top T-40 screw from the front canopy frame tube; then insert the screw through the mounting hole in the D-Ring and secure D-Ring to frame tube with T-40 screw. See Fig. 1.

5. Thread the strap webbing through the top of the D-ring and upward to the ladder lock; then pull until taut. See Fig. 1.

Fig. 1



UTV-001A



#### CAUTION

Do not allow rain, snow, or ice to accumulate on the top. Also, trailering the UTV with an attached soft top is not advisable. Damage to the top may occur.

