


# Arctic Cat® UTV

## Installation Instructions - Accessory Kit

### Prowler Gun Scabbard

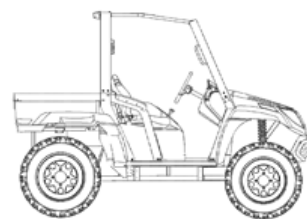

■ **NOTE:** Read these installation instructions thoroughly before beginning the installation process. Retain these Installation Instructions for future reference.

#### Application

2006-2008 Prowler/Prowler XT/XTX Models

#### Kit includes:

p/n	QTY	DESCRIPTION
1436-151	1	Gun Scabbard (Max -4 Camo)
1436-107	1	Gun Scabbard (Black)
N/A	2	Screw
N/A	2	J-Hook
0453-492	1	Instructions

1. Place the J-hooks in an upright position; then using the screws from the sub-assembly, secure the hooks to the rear of the gun scabbard by inserting the screws through the hole in each hook.
2. Place the gun scabbard on the back of the operator's compartment; then thread the straps around the headrest crossbar. Connect the buckles. See Fig. 1.

Fig. 1



OHUV-056

3. Thread each strap around the horizontal bar and through the D-ring; then connect the straps to the velcro section of the strap. See Fig. 2.

Fig. 2



OHUV-057

