

MOTORPORT™

PART #4639-481

10-ft. SINGLE MOTORPORT

PARTS LIST / INSTALLATION INSTRUCTION SHEET

<u>PART#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
AH101	46.6" Arc w/Connector	6
AH103	45" Arc w/o Connector	2
AH104	38.67" Side w/Connector	4
AH105	38.67" Side w/o Connector	2
AH106	46.6" Front/Back w/o Connector	2
AH107	Corner Piece	4
AH111	42.5" Spreader Bar	3
AH114	Canvas Cover (Not Shown)	1
AH115	Installation Instructions	1
AH122	Ground Anchor Stake	4
AH126	Mounting Bracket	6
AH133	Hardware Package	1

(Contains: 6 ea. Hitch Pins, 6 ea. Screw for Spreader Bar,
12 ea. Self-Drilling Screws for Brackets)



Figure A.

INSTALLATION INSTRUCTIONS

1. Install BASE pieces, being sure that all corner pieces have the Hitch Pin Holes on TOP side. (*Figure B, C*)



Figure B.

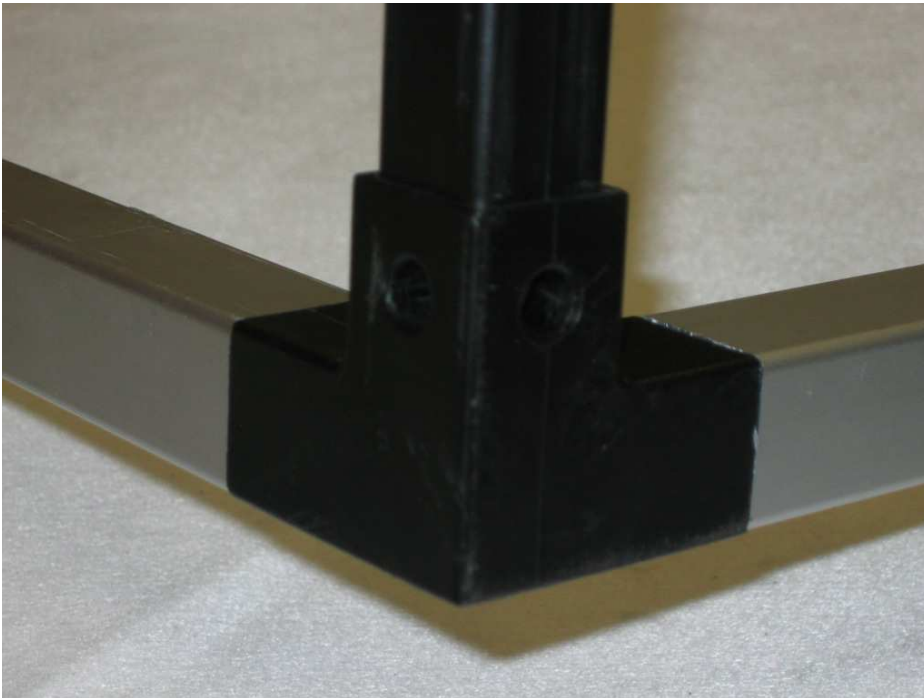


Figure C.

2. Add Arch pieces to connect the Front Corners to the Rear Corners. On each side USE 3 Arch Pieces with connector (AH101) and 1 Arch Piece with no connector (AH103)
(Figure D)



Figure D.

3. Lay Frame on one side and attach Cinch Straps to the Upper Part. (Figure E)



Figure E.

4. Lay Frame on other side and install remaining Cinch Straps. Turn upright.
(Figure F)



Figure F.

5. Assembled Motorport



Figure G.

TO INSTALL ON TRAILER

1. Set into desired position on trailer, keeping it against the trailer side rail.
2. Drill 11/32" holes for Hitch Pins in the side rail of the trailer, (*Figure H*) where Hitch Pin holes lines up on corner pieces. IF Trailer has no rail, use AH126 Mounting Brackets with 2" self-drilling screws provided.



Figure H.

3. Mark location of the Mounting Bracket in the trailer center and install with 2" self-drilling screws provided. (*Figure I*)



Figure I.

FOR GROUND INSTALLATION

1. Set Motorport onto desired location.
2. Drive tent Anchor/Hinge into the ground, lining up the Hitch Pin holes with the Hitch Pin in the Motorport.

USE – On a trailer, or on the ground, once properly installed the Motorport may be opened from either end for easy entry/exit.

WARNING
DO NOT EXCEED 65 MPH WHILE TRAILERING
MOTORPORT

MOTORPORT™

PART #4639-481
10-ft. SINGLE MOTORPORT

<u>PART#</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
AH101	46.6" Arc w/Connector	6
AH103	45" Arc w/o Connector	2
AH104	38.67" Side w/Connector	4
AH105	38.67" Side w/o Connector	2
AH106	46.6" Front/Back w/o Connector	2
AH107	Corner Piece	4
AH111	42.5" Spreader Bar	3
AH122	Ground Anchor Stake	4
AH126	Mounting Bracket	6
AH133	Hardware Package (Contains: 6 ea. Hitch Pin, 6 ea. Screw for Spreader Bars, 12 Self-Drilling Screws for brackets)	1
AH114	Canvas Cover	1
AH115	Installation Package	1

For spare parts contact: Commercial Sewing customer service at cs@commercialsewing.com or by calling (860)482-5509 x137.