



# INSTALLATION INSTRUCTIONS


Accessory  
**PERSONAL WATERCRAFT  
COVER**

Application  
**ARX1200T3/N3  
ARX1200T2/N2**

Publications No.  
**MII 10858**  
Issue Date  
**NOVEMBER 2004**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

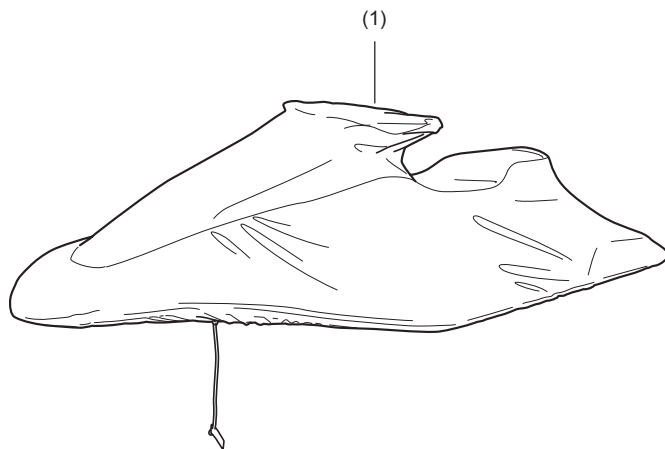

No.	Description	Qty
(1)	Cover	1

## TOOL AND SUPPLIES REQUIRED

Scissors  
Cigarette lighter


## USE AND CARE INFORMATION

- To clean, sponge the cover with mild soap and cold water, rinse and allow it to drip dry.
- Do not use bleach, harsh detergents, or hot water.
- For stubborn stains use mild detergent.
- Do not machine wash or dry!



## INSTALLATION

### INITIAL FITTING PROCEDURE


1. Fit the cover over the handlebars and mirrors.

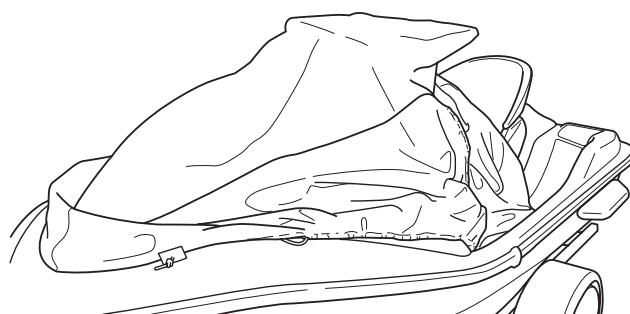


2. Pull the cover completely over the front of the PWC, until it reaches down under the bow. Attach the clips to the gunwale as shown and make sure they are evenly aligned.

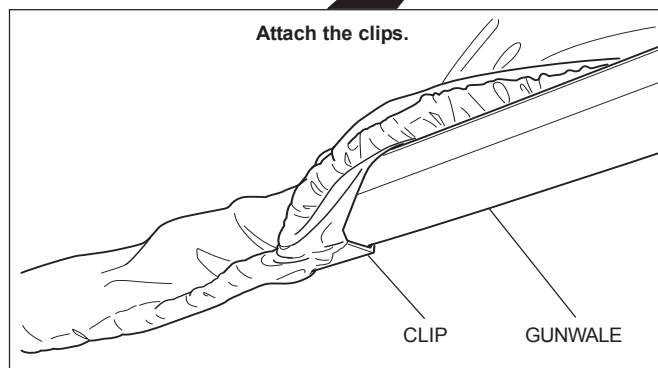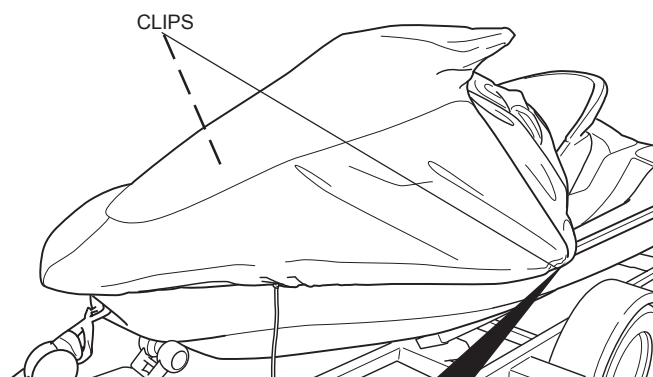


3. Pull the cover completely over the back of the machine one side at a time. Attach all the clips as you go.

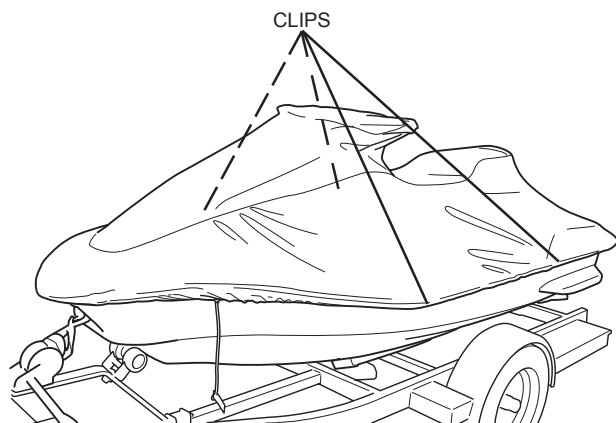


4. Find the knot in the elastic cord located at the front of the cover. Pull the knot and elastic out as far as possible and re-tie the knot close to the sewn edge of the cover (large enough that it will not slip through the hole). Make sure the cover can be removed from the rear and re-installed. Adjust the tension of the elastic cord if necessary.

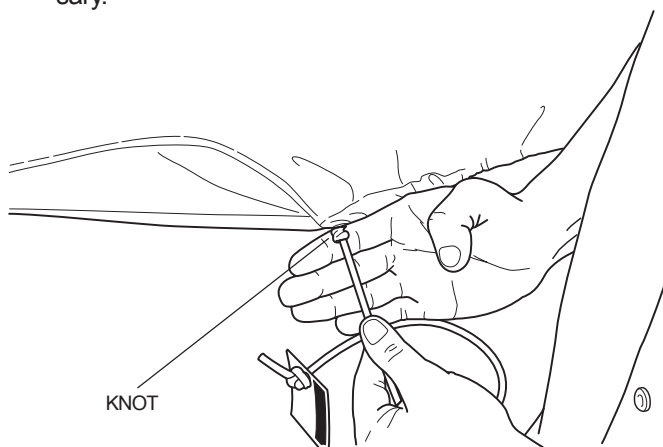


5. Ensure the knot is secure then cut the excess elastic cord.

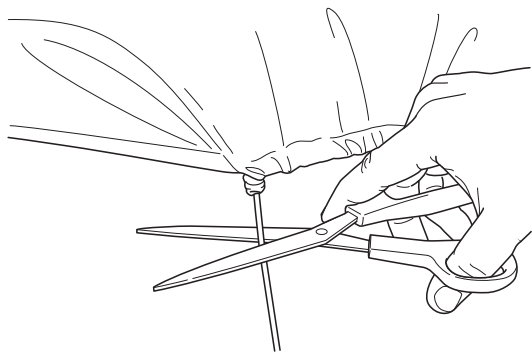

6. Seal the cut end with a cigarette lighter.

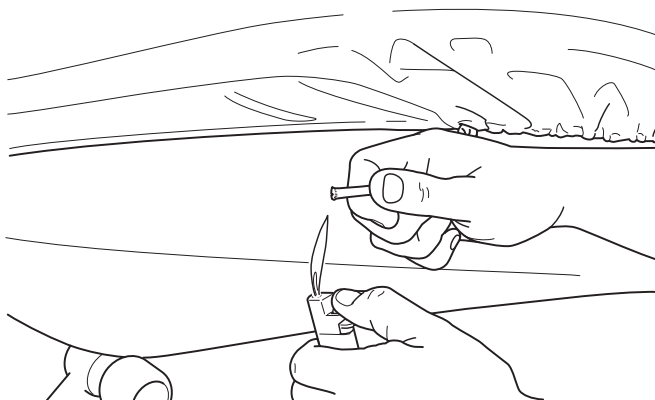

7. Remove the styrofoam plugs from the vacu-vents.

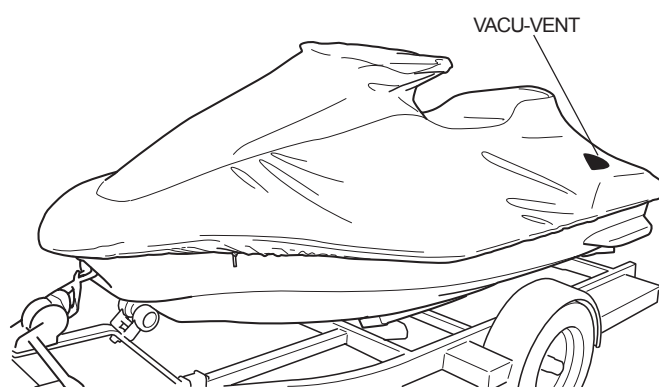

8. To remove the cover, follow the instructions in the reverse order of installation.

**NOTICE**

Do not remove the cover front-end first, it may damage the cover.