

Kawasaki®

MULE TOP/BACK-

Part #KAF25-036, #KAF300-19, #KAF300-20, #KAF300-21, #KAF300-24

Note: If a windshield is to be installed on the Mule, install it before the top is installed.

INSTALLATION INSTRUCTIONS

1. Place fiberglass rod into holes in gray plastic clips, then snap the clips on the top center of the cab frame, so that the rod is centered front to back and goes side to side.
2. Thread two side release buckles to the two larger 1" webbing pieces, as shown.
3. Evenly drape top over frame of operators compartment so that the clear vinyl faces the back side.
4. Note where self-adhesive velcro will attach when webbing/velcro strap is tensioned to the roll cage bar.
5. Clean noted area with isopropyl rubbing alcohol and allow to dry.
6. Peel backing of self-adhesive velcro and adhere to the noted area. Maximum velcro adhesion will occur in 24 hrs. at room temp. Attach the velcro on the strap to the velcro on the roll cage.
7. Feed bottom rear webbing and buckle straps inside main frame tube and under lower seat back tube. Connect the buckles.
8. Tighten all strap connections evenly.

WARNING:

Remove fabric top before transport of Mule at highway speeds!

CAUTION


Do not allow snow or water to accumulate. Be sure to install fiberglass anti-pooling rod.

CARE & CLEANING

Do not machine wash or dry. To clean, hose down thoroughly to remove all dirt and/or road salt. Dry cover on machine or on a clothesline. Do not store the Mule outdoors with the cover installed. Prolonged exposure to direct sunlight and heat can result in a breakdown of the fibers in your cover. Damage resulting from prolonged exposure to direct sunlight cannot be warranted.

WARRANTY INFORMATION

Your new Kawasaki accessory is guaranteed to be free from defects in material and workmanship for one year from date of purchase.
ISKAF25036/R6

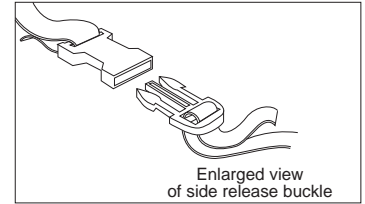

6-28-04

Kawasaki®

MULE TOP/BACK-

Part #KAF25-036, #KAF300-19, #KAF300-20, #KAF300-21, #KAF300-24

Note: If a windshield is to be installed on the Mule, install it before the top is installed.

INSTALLATION INSTRUCTIONS

1. Place fiberglass rod into holes in gray plastic clips, then snap the clips on the top center of the cab frame, so that the rod is centered front to back and goes side to side.
2. Thread two side release buckles to the two larger 1" webbing pieces, as shown.
3. Evenly drape top over frame of operators compartment so that the clear vinyl faces the back side.
4. Note where self-adhesive velcro will attach when webbing/velcro strap is tensioned to the roll cage bar.
5. Clean noted area with isopropyl rubbing alcohol and allow to dry.
6. Peel backing of self-adhesive velcro and adhere to the noted area. Maximum velcro adhesion will occur in 24 hrs. at room temp. Attach the velcro on the strap to the velcro on the roll cage.
7. Feed bottom rear webbing and buckle straps inside main frame tube and under lower seat back tube. Connect the buckles.
8. Tighten all strap connections evenly.

WARNING:

Remove fabric top before transport of Mule at highway speeds!

CAUTION


Do not allow snow or water to accumulate. Be sure to install fiberglass anti-pooling rod.

CARE & CLEANING

Do not machine wash or dry. To clean, hose down thoroughly to remove all dirt and/or road salt. Dry cover on machine or on a clothesline. Do not store the Mule outdoors with the cover installed. Prolonged exposure to direct sunlight and heat can result in a breakdown of the fibers in your cover. Damage resulting from prolonged exposure to direct sunlight cannot be warranted.

WARRANTY INFORMATION

Your new Kawasaki accessory is guaranteed to be free from defects in material and workmanship for one year from date of purchase.
ISKAF25036/R6

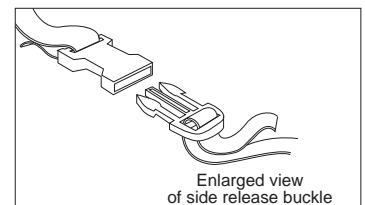

6-28-04