(1)-SOFT TOP (2)-FIBERGLASS RODS-24"

(4)-GRAY CLIPS

(2) STRAPS WITH LOOPS

INI SOFT TOP RGR

INSTALLATION INSTRUCTIONS-

Note: For installation with a windshield-first install the fiberglass rods as instructed below then install the windshield following the windshield instructions and last install the top.

Optional: Place fiberglass rods (2) into holes in gray plastic clips, then snap the clips on the top center section of the roll cage, between the 2nd and third frame bar, so that the rods are centered side to side and go front to back. If installing with a windshield the rods need to be cut approx. 1.25" and the front clamps need to be installed in an upsidedown manner to be free from the edge of the windshield.

Open the hood.

Evenly drape the top over the frame of operators compartment. See photo 1.


Feed the rear webbing/buckle straps around the horizontal crossbar and connect the buckles.


Feed the webbing from the sub assembly kit around the base of the roll cage bar, and through the sewn loop as seen in photo 2.

Feed the webbing through the cut out between the roll cage and the hood and close the hood. See photo 3.

Bring the strap up to the ladderlock buckle and thread the end of the strap through the buckle.

Cinch all webbing and buckle straps evenly, being sure to keep top centered. The top is designed to have a very tight fit. WARNING! Do not allow snow or water to accumulate. If problems persist install the gray clips and the fiberglass rods.

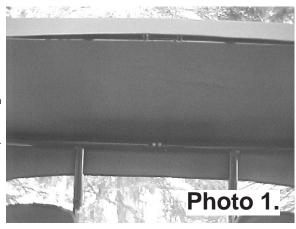

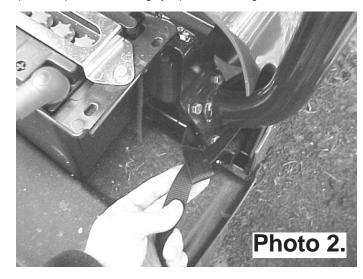



WARNING!

Do not operate in temps. below -30. Remove if unit is to be trailered on public roads.

CARE & CLEANING

To clean, simply rinse in cold water and allow to air dry. Do not use harsh detergents, do not machine wash or dry.

WARRANTY INSTRUCTIONS

Your new Polaris accessory is guaranteed against defects in material and workmanship for one full year from the date of purchase. Should any problems arise, please contact your dealer. No warranty card is necessary.



IS2876763/R0 7-27-07