



QUICK RELEASE BAG

Application:

Front Quick Release Bag PN 2874979

Rear Quick Release Bag PN 2874980

Before you begin, read these instructions completely.
Please retain these instructions for future reference information.
Weight limitations: FRONT: 20 lbs. REAR: 25 lbs.

IMPORTANT:

Your Polaris accessory kit is exclusively designed for your vehicle.
Please read the installation instructions thoroughly before beginning.
Installation of any item is easier if the vehicle is clean and free of debris.
The weight of the bag and contents should not exceed the recommended load capacity for your bag as specified above.

INSTALLATION OF CARGO BAG WITH QUICK RELEASE




1. Insert the foam into the top zippered portion of the bag -(For rear rack bag only).

ZIPPER PULL INSTALLATION For this step refer to pictures 1 through 7.

2. Feed the lace into the plastic tab. Place both ends of the lace into the smaller tapered opening evenly and close the end of the tab. Thread the zipper pulls onto the zipper slides.

INSTALLATION ONTO VEHICLE

3. Remove the rack extension if so equipped.
4. Turn the quick release handles located on the bottom of the bag 90 degrees in line with cargo bag feet.
5. Place cargo bag onto rack and align bag such that the quick release components fit into the oval slots of the rack.
6. From beneath rack, twist the quick release handle 90 degrees to lock.
7. Repeat on other side.

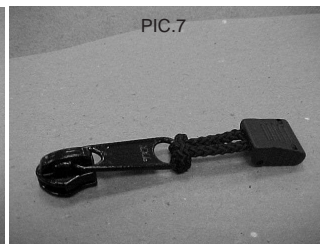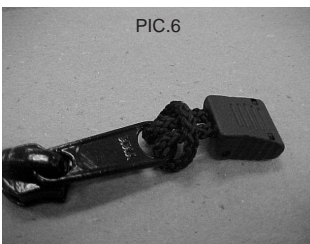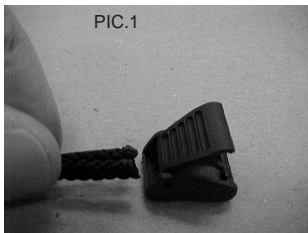

WARRANTY:

Your new Polaris accessory is guaranteed to be free from defects in material and workmanship for one full year from the date of purchase.

Should any problems arise, please contact your dealer. No warranty card is necessary.