




RAZOR FABRIC TOP INSTALLATION INSTRUCTIONS

1. Thread the webbing strap around the bar and back through the loop as seen in photo 1.
2. Feed the strap up through between the plastic and the vertical upright bar as seen in photo 2.
3. Drape the top over the roll cage.
4. Thread the front strap onto the front ladderlock as seen in photo 3, but do not fully tighten.
5. Thread the rear strap between the vertical upright bar and the seat belt bracket as seen in photo 4.
6. Cinch all connections evenly. Pull the top so that the seams align with the contour of the roll cage and the windshield. As seen in photo 5.

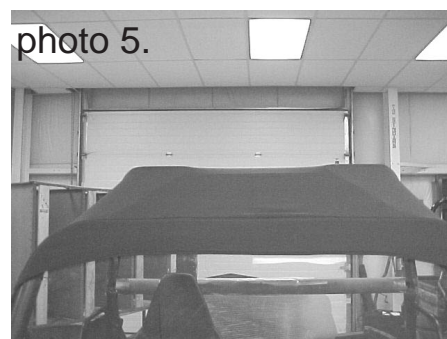

WARNING:

Do not allow rain, snow or ice to accumulate.

WARRANTY INSTRUCTIONS

Your new Polaris accessory is guaranteed by Polaris against any defects in material and workmanship for one full year from the date of purchase. Should any problems arise, please contact your dealer. No warranty card is necessary.