



TRAILERABLE COVER INSTALLATION INSTRUCTIONS

Prior to draping the cover connect the velcro near the ratchet to the velcro on the cover.

Connect the velcro wrap on the inside of the cover around the horizontal bar. Drape the cover aligning the cover over the opposite canopy bars.

Pull the front of cover over the hood and front bumper.

Pull the rear of the cover over the rear cargo box.

Pull excess material over footwells. Be sure the cover is pulled down as far as possible, the tighter the better.



Connect the webbing/buckle straps at the front. Be sure that the strap is fed under any tiedown straps that are connecting the vehicle to the trailer, cinch tight by grabbing the center of the webbing and pulling backward 6-10" to gather any excess slack.

Feed the rear webbing through the ratchet and ratchet the cover tight.

Thread the center strap through the male end of the buckle. Connect to the buckles sewn on the cover, and cinch tight, do so by pulling the excess webbing underneath the footwells. This will further tension the cover.

Thread the strap through the ladderlock buckle as seen in diagram 2 and cinch over any excess material to prevent buffeting.

If not equipped with a pre-runner bumper cinch the excess material using the ladderlock buckles and webbing straps. See photo.

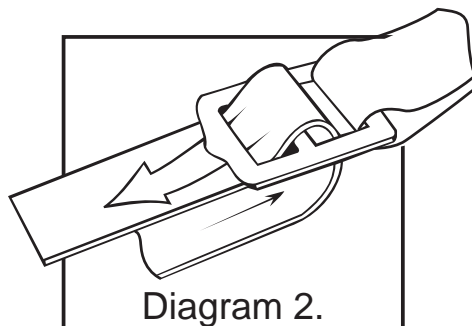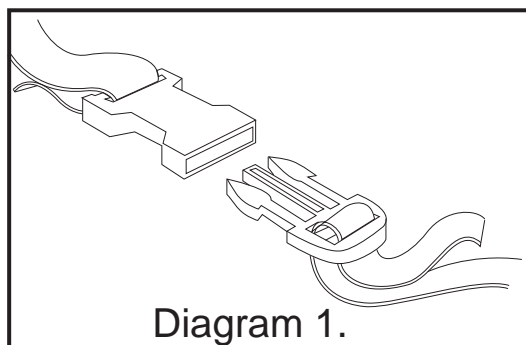

WARRANTY INSTRUCTIONS

Your new Polaris accessory is guaranteed by Polaris against any defects in material and workmanship for one full year from the date of purchase. Should any problems arise, please contact your dealer. No warranty card is necessary.