

DELUXE SADDLE TRUNK BAG

Part #2874150

Saddle Trunk Installation Instructions:

- 1. Position the saddle trunk bag over the rear seat hump so that the trunk portion opens to the front of the machine.
- 2. Pull forward attachment straps forward and down against the tunnel. Approximately 1 1/2" from the bag scribe a mark where the cam buckles are to be attached. (See Diagram A.)
- 3. Using a 3/16" drill bit, drill the tunnel and attach the cam buckles with the rivets provided. Use care not to damage any heat exchanges or suspension components.
- 4. Connect the rear strap under the rear bumper and cinch tight.

Care & Use:


To clean, simply rinse in cold water and allow to air dry. Do not use harsh detergents, do not machine wash or dry.

Warning: Make sure bags are secure before loading.

Do not overload bags.

Maximum weight limit is 5 lbs per saddlebag and trunk section.

Do not carry sharp, pointed, or heavy objects.

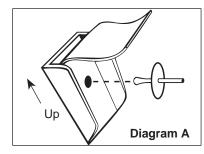

Warranty

Your new Polaris accessory is guaranteed against any defects in materials and workmanship for one year from the date of your purchase. Should any problems arise contact your dealer. No warranty card is necessary.

IS2874150/R0 3-20-02



DELUXE SADDLE TRUNK BAG

Part #2874150

Saddle Trunk Installation Instructions:

Check for the following before installation:

Check for the following before installation:

1 Instruction sheet1 Saddle trunk bag

2 Cam buckles

2 3/16" rivets

- 1 Instruction sheet
- 1 Saddle trunk bag
- 2 Cam buckles
- 2 3/16" rivets
- 1. Position the saddle trunk bag over the rear seat hump so that the trunk portion opens to the front of the machine.
- 2. Pull forward attachment straps forward and down against the tunnel. Approximately 1 1/2" from the bag scribe a mark where the cam buckles are to be attached. (See Diagram A.)
- 3. Using a 3/16" drill bit, drill the tunnel and attach the cam buckles with the rivets provided. Use care not to damage any heat exchanges or suspension components.
- 4. Connect the rear strap under the rear bumper and cinch tight.

Care & Use:

To clean, simply rinse in cold water and allow to air dry. Do not use harsh detergents, do not machine wash or dry.

Warning: Make sure bags are secure before loading.


Do not overload bags.

Maximum weight limit is 5 lbs per saddlebag and trunk section.

Do not carry sharp, pointed, or heavy objects.



Your new Polaris accessory is guaranteed against any defects in materials and workmanship for one year from the date of your purchase. Should any problems arise contact your dealer. No warranty card is necessary.

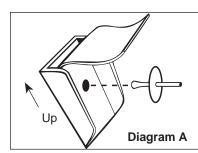

IS2874150/R0 3-20-02