


PREMIUM COVER POLARIS®

Custom designed and carefully manufactured for :

- Vacu-Hold™ System for strapless trailering
- Made of SurLast™ Solution Dyed Polyester
- Ultra-violet resistant
- Mildew and rot resistant
- Gas cap opening
- Water repellent
- Elastic base
- 1 year warranty

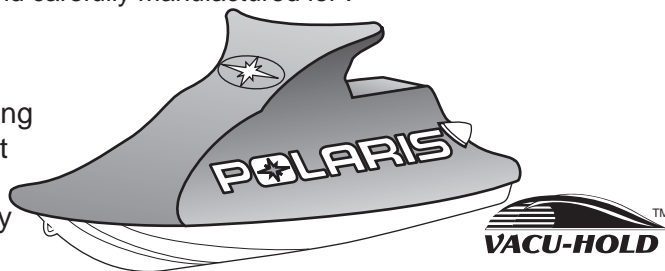

WARRANTY:

Your new Polaris cover is guaranteed by Polaris against any defects in material and workmanship for one full year from the date of your purchase. Should any problems arise with your new cover, please contact your dealer. No warranty card is necessary.

WARRANTY CLAIMS FOR THIS COVER ARE LIMITED TO COVER REPLACEMENT ONLY.

Your new POLARIS cover is equipped with the Vacu-Hold System. This unique patented design allows the covered machine to be trailered at highway speeds WITH NO HOLD DOWN STRAPS. A unique vacuum/vent is incorporated onto the cover so that as the covered machine is trailered, a negative pressure is created to keep the cover tightly in place. No rippling, no whipping, no strap damage to hulls.

Note: Additional nylon webbing tie down loops are provided. These may be used with a bungee cord or rope (not provided) when trailering behind a vehicle causing extreme turbulence or in high cross wind conditions. FOR THE MSX COVER-a J-channel clip is sewn into the hem of the cover connect this clip to the gunwale of the watercraft when necessary.

IMPORTANT: Before using this cover the first time, the elastic must be adjusted to be as tight as possible. To tighten - install cover, locate the elastic knot at the front. Pull the knot and elastic out as far as possible and retie the knot. (Large enough not to slip through the sewn edge.) Check to see if cover can be removed and reinstalled at the rear. Trim the excess elastic 1" from the end and sear edge with a cigarette lighter to prevent fraying. Occasionally check the elastic for tightness.

To properly install your new cover:



Fit cover over handlebars. Pull cover over front of machine. Pull cover over back, one side at a time.

To remove: Follow instructions in reverse order. **WARNING:** Do not remove cover from front end first!


ISPOLPRO/R2

9-18-02

PREMIUM COVER POLARIS®

Custom designed and carefully manufactured for :

- Vacu-Hold™ System for strapless trailering
- Made of SurLast™ Solution Dyed Polyester
- Ultra-violet resistant
- Mildew and rot resistant
- Gas cap opening
- Water repellent
- Elastic base
- 1 year warranty

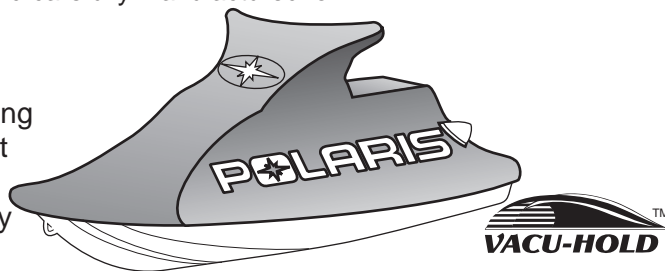

WARRANTY:

Your new Polaris cover is guaranteed by Polaris against any defects in material and workmanship for one full year from the date of your purchase. Should any problems arise with your new cover, please contact your dealer. No warranty card is necessary.

WARRANTY CLAIMS FOR THIS COVER ARE LIMITED TO COVER REPLACEMENT ONLY.

Your new POLARIS cover is equipped with the Vacu-Hold System. This unique patented design allows the covered machine to be trailered at highway speeds WITH NO HOLD DOWN STRAPS. A unique vacuum/vent is incorporated onto the cover so that as the covered machine is trailered, a negative pressure is created to keep the cover tightly in place. No rippling, no whipping, no strap damage to hulls.

Note: Additional nylon webbing tie down loops are provided. These may be used with a bungee cord or rope (not provided) when trailering behind a vehicle causing extreme turbulence or in high cross wind conditions. FOR THE MSX COVER-a J-channel clip is sewn into the hem of the cover connect this clip to the gunwale of the watercraft when necessary.

IMPORTANT: Before using this cover the first time, the elastic must be adjusted to be as tight as possible. To tighten - install cover, locate the elastic knot at the front. Pull the knot and elastic out as far as possible and retie the knot. (Large enough not to slip through the sewn edge.) Check to see if cover can be removed and reinstalled at the rear. Trim the excess elastic 1" from the end and sear edge with a cigarette lighter to prevent fraying. Occasionally check the elastic for tightness.

To properly install your new cover:



Fit cover over handlebars. Pull cover over front of machine. Pull cover over back, one side at a time.

To remove: Follow instructions in reverse order. **WARNING:** Do not remove cover from front end first!

ISPOLPRO/R2

9-18-02