



INSTALLATION INSTRUCTIONS
Rear Window Kit (Black/Camo)
16B-K750A-V0
16B-K750A-U0
FX-4



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the accessory or vehicle.

DEALER:

These instructions contain important information for future reference and *must* be given to the customer.

WARRANTY INFORMATION:

- Genuine Yamaha components are covered by a one year limited warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Limited Warranty provided with new Yamaha vehicles has exclusions for certain failures, including those caused by competition or racing use (except YZ and WR motorcycle models) as well as by abnormal strain or abuse. While installation of these components will not “void” your vehicle’s warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use (except YZ and WR motorcycle models), may not be covered by warranty or Yamaha Extended Service.

PARTS LIST:

This kit contains the following components. Before beginning installation, confirm there are no missing or damaged components.

Item	Part Number	Description	Qty
--	16B-K750A-V0	Rear Window Kit (Black)	--
①	*	Rear Window	1

*Part supplied with kit only and not available separately.

Item	Part Number	Description	Qty
--	16B-K750A-U0	Rear Window Kit (Camo)	--
①	*	Rear Window	1

*Part supplied with kit only and not available separately.

①


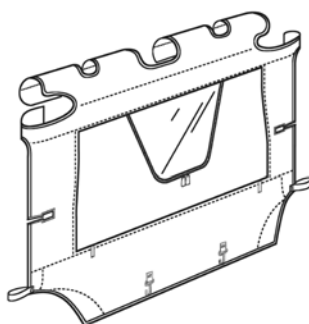


Fig. 1

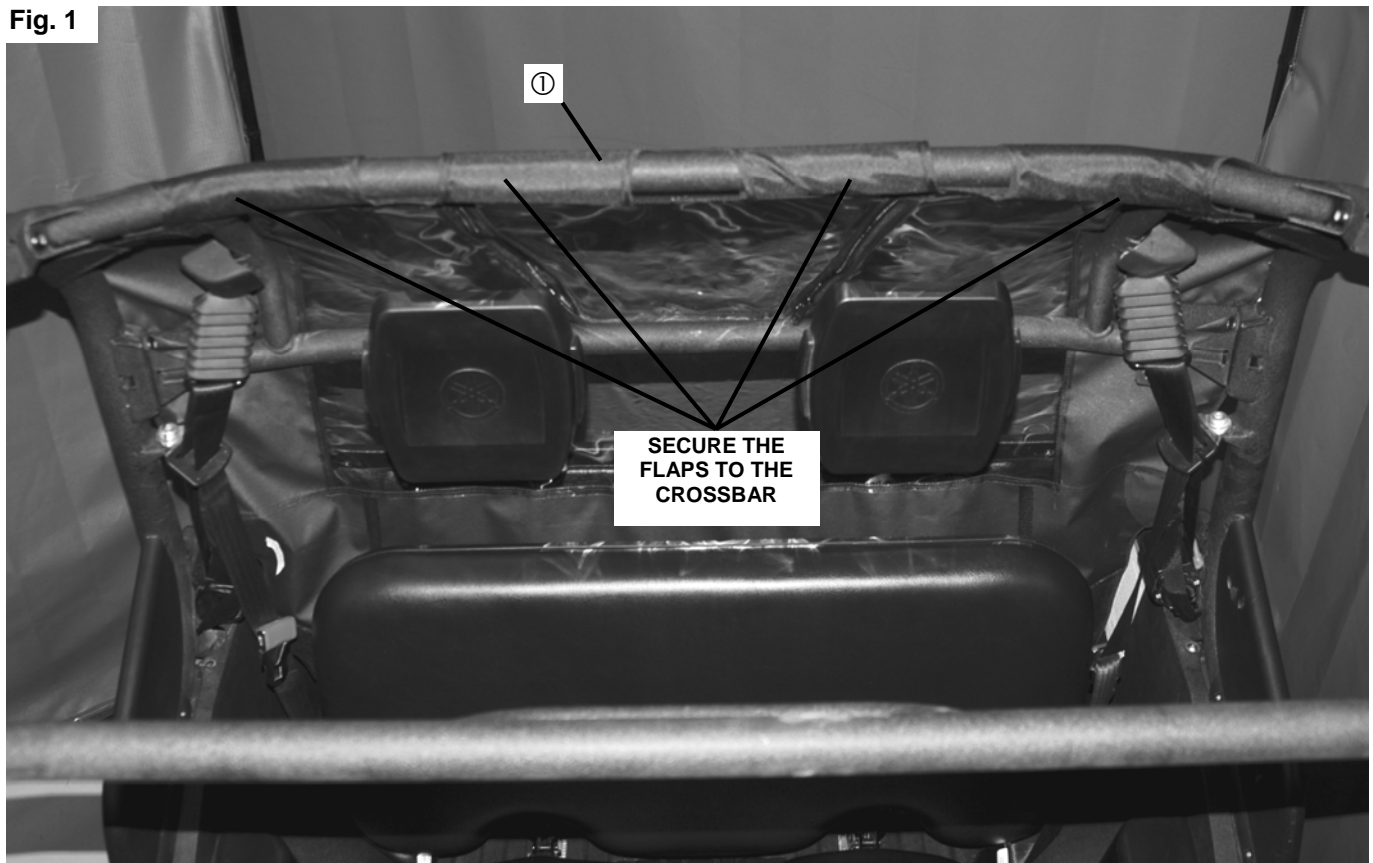


PREPARATION:

1. Place FX-4 on a secure level surface and set the parking brake.
2. Clean all mounting surfaces before beginning installation.

INSTALLATION:


1. Place the rear window ① against the rear crossbar.
2. Attach the upper flaps to the rear crossbar as shown in Figure 1. Make sure the window is centered between the frame tubes.

Fig. 2

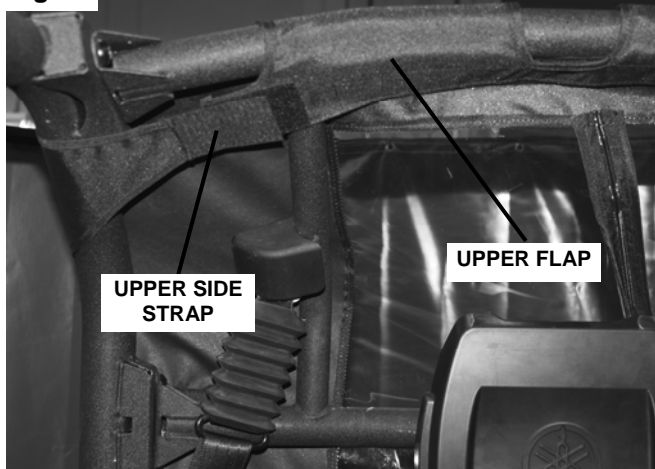


3. Secure the upper side straps to the upper flaps as shown in Figure 2.

Fig. 3

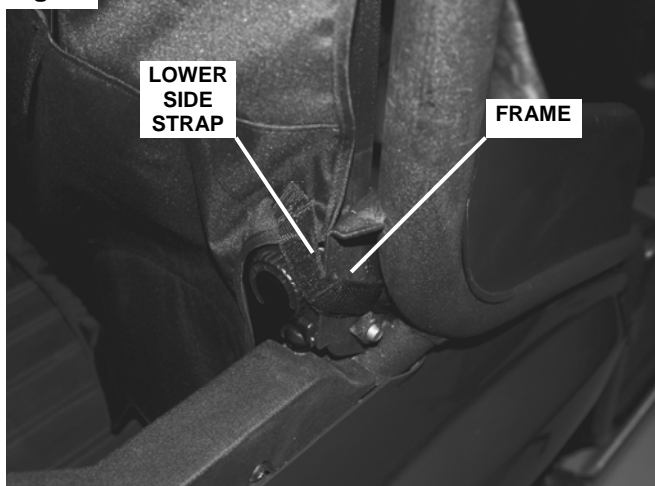

4. Wrap the lower side straps around the frame and connect the Velcro® halves as shown in Figure 3.

Fig. 4

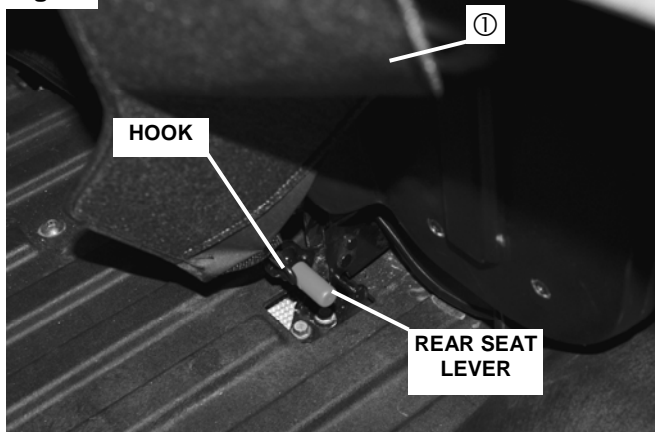

5. Attach the hooks to the rear seat lever to secure the lower portion of the rear window ① (Fig. 4).

MAINTENANCE:

Check straps and hooks for looseness regularly and reattach as required.

CARE AND CLEANING:

Do not machine wash, dry or use harsh detergents on soft sun top. Clean with cold water and allow to air dry. Do not place any items on the top when mounted. Do not allow snow or rain to accumulate on the top surface.

CUSTOMER SERVICE:

For further information, see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.2 HRS