



INSTALLATION INSTRUCTIONS

Soft Sun Top Kit

16B-K830V-V0

FX-4



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the accessory or vehicle.

DEALER:

These instructions contain important information for future reference and *must* be given to the customer.

WARRANTY INFORMATION:

- Genuine Yamaha accessories are covered by a one year limited warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Limited Warranty provided with new Yamaha vehicles has exclusions for certain failures, including those caused by competition or racing use (except YZ and WR motorcycle models) as well as by abnormal strain or abuse. While installation of these components will not “void” your vehicle’s warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use (except YZ and WR motorcycle models), may not be covered by warranty or Yamaha Extended Service.

PARTS LIST:

This kit contains the following components. Before beginning installation, confirm there are no missing or damaged components.

Item	Part Number	Description	Qty
--	16B-K830V-V0	Soft Sun Top Kit	--
①	*	Sun Top	1
②	*	Front Straps	2
③	*	Support Hook	4
④	*	Plastic Support	2
⑤	*	Aluminum Support	1

* Part supplied with kit only and not available separately.

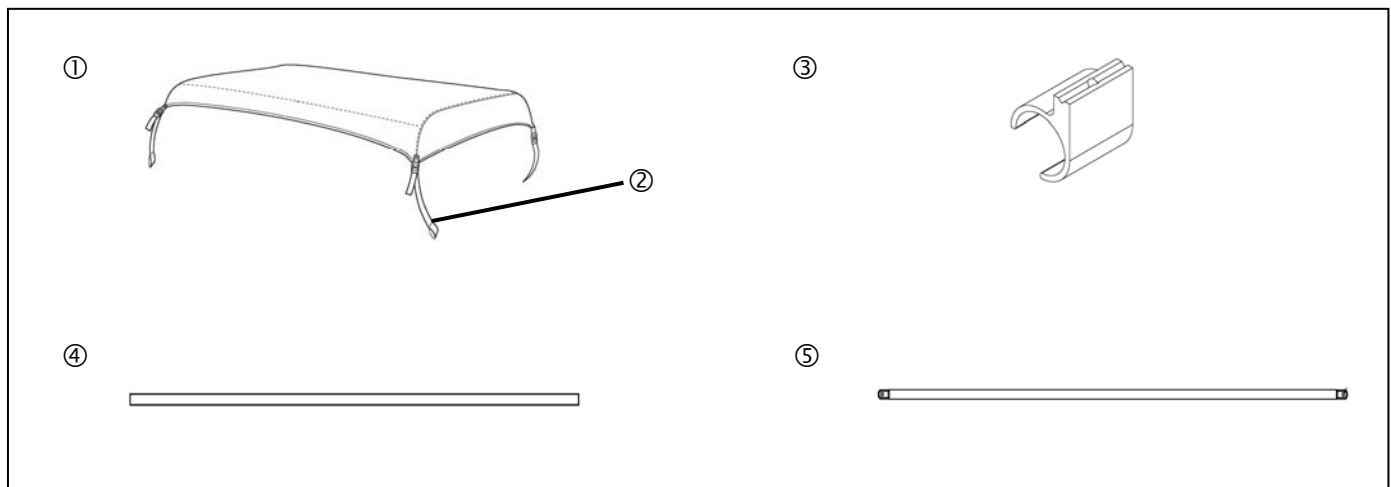


Fig. 1

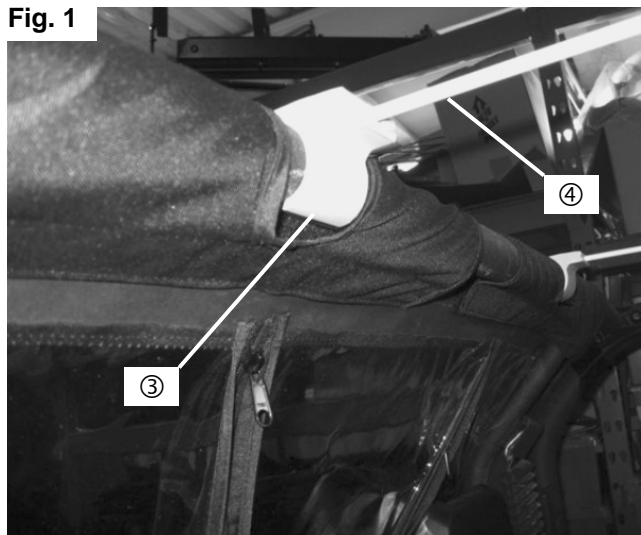


Fig. 2


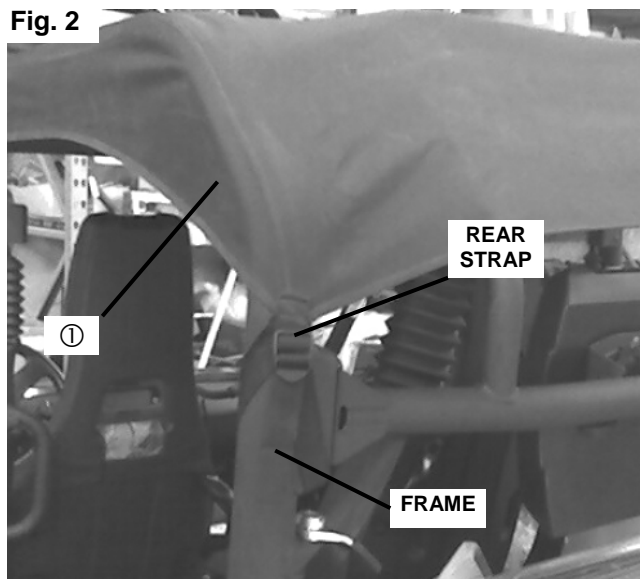


Fig. 3

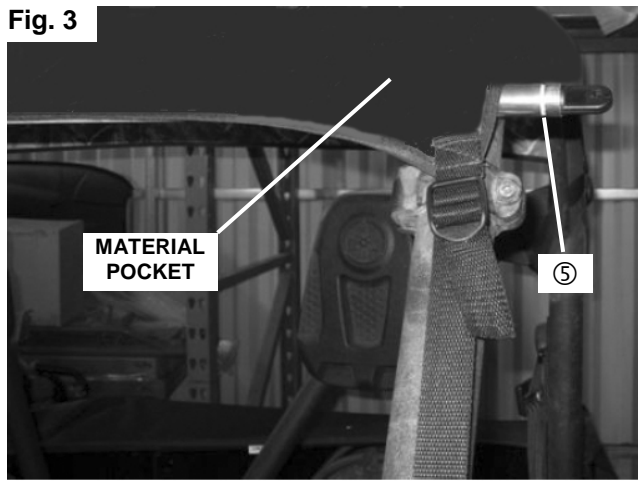


PREPARATION:

1. Place FX-4 on a secure level surface and set the parking brake.
2. Clean all mounting surfaces before beginning installation.

INSTALLATION:

1. Install four support hooks ③ onto the front and rear horizontal crossbars (Fig. 1).
2. Install the plastic supports ④ into the holes on the support hooks as shown in Figure 1. Make sure stringers travel above the central horizontal crossbar.
3. Drape sun top cover ① over the horizontal crossbars and the plastic supports ④.
4. Secure the rear straps to the frame tubes as shown in Figure 2.
5. Insert the aluminum tube ⑤ through the material pocket and place the ends between the vertical frame and the top (Fig. 3).

Fig. 4

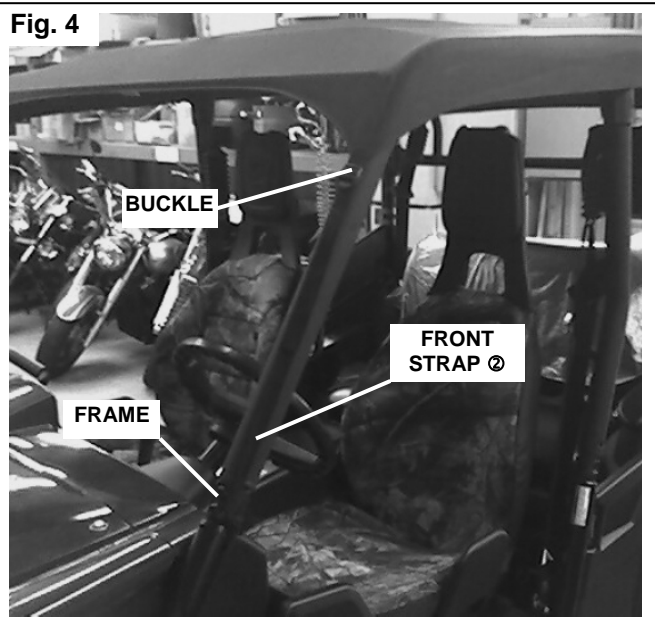

6. Wrap the front straps ② around the point where the upper frame meets the lower frame tubes (Fig. 4).
7. Feed one end of the front straps ② through the loops at the opposite end and cinch it tight around the tube (Fig. 4).
8. Feed the loose end of the front straps ② through the buckles on the sun top cover ①.
9. Tighten all straps evenly to secure the sun top cover ① in place.

MAINTENANCE:

Check straps for looseness regularly and retighten as required.

CARE AND CLEANING:

Do not machine wash, dry or use harsh detergents on soft sun top. Clean with cold water and allow to air dry. Do not place any items on the top when mounted. Do not allow snow or rain to accumulate on the top surface.

CUSTOMER SERVICE:

For further information, see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.2 HRS