

INSTALLATION INSTRUCTIONS
Soft Sun Top Cover Kit
5B4-K830V-V0
5B4-K830V-U0
Rhino (all)



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the accessory or vehicle.

DEALER:

These instructions contain important information for future reference and *must* be given to the customer.

WARRANTY INFORMATION:

- Genuine Yamaha components are covered by a one year limited warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Limited Warranty provided with new Yamaha vehicles has exclusions for certain failures, including those caused by competition or racing use (except YZ and WR motorcycle models) as well as by abnormal strain or abuse. While installation of these components will not “void” your vehicle’s warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use (except YZ and WR motorcycle models), may not be covered by warranty or Yamaha Extended Service.

PARTS LIST:

This kit contains the following components. Before beginning installation, confirm there are no missing or damaged components.

Item	Part Number	Description	Qty
--	5B4-K830V-XX	Soft Sun Top Cover Kit	--
①	*	Sun Top Cover	1
②	*	Straps W/Loops	2
③	*	Aluminum Tube W/Eye Ends	1

* Part supplied with kit only and not available separately.


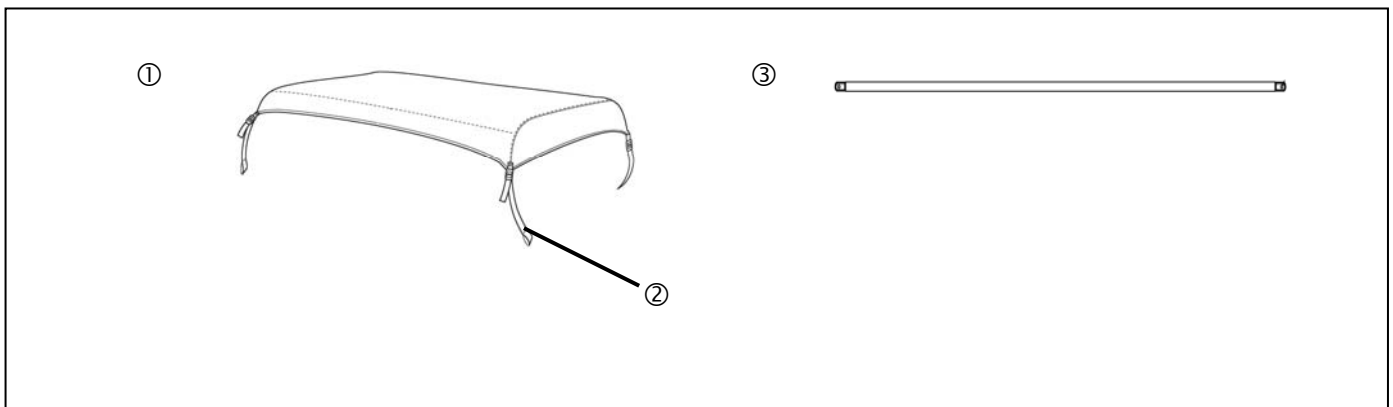


Fig. 1

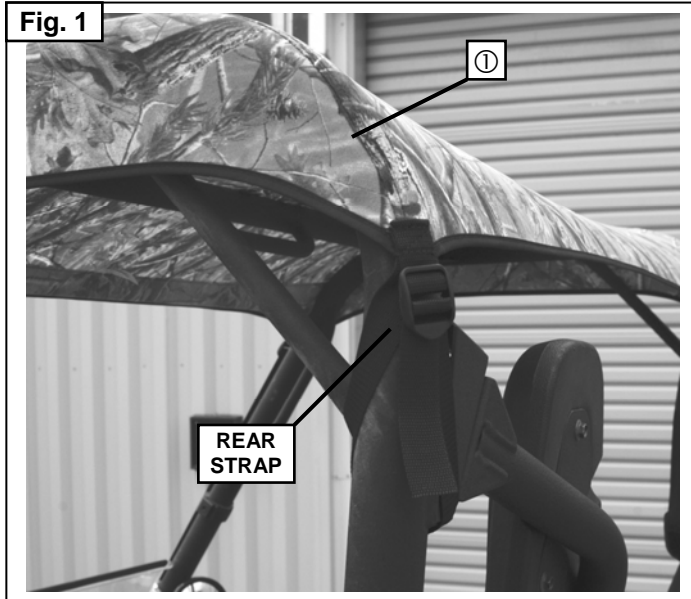


PREPARATION:

1. Place Rhino on a secure and level surface.
2. Clean all mounting surfaces before beginning installation.

INSTALLATION:


1. Drape sun top cover ① over the frame tubes.
2. Secure the rear straps to the frame tubes as shown in Figure 1.

Fig. 2

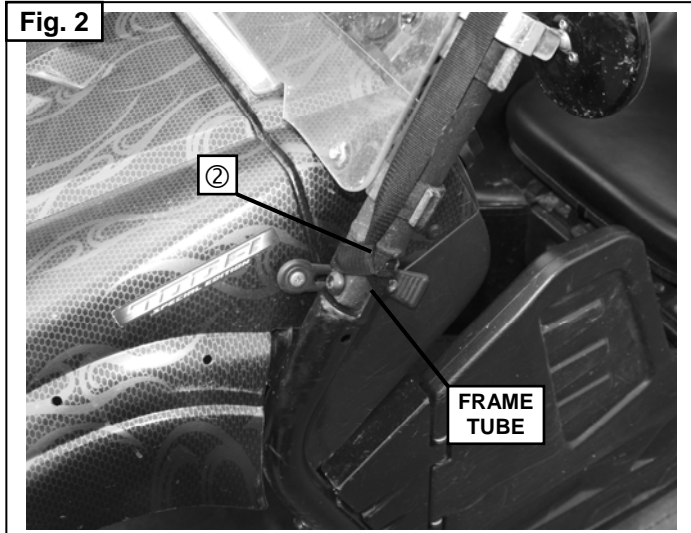

3. Wrap the front straps ② around the lower frame tubes (Fig. 2).
4. Feed one end of the straps through the loops at the opposite end and cinch it tight around the tube (Fig. 2).

Fig. 3

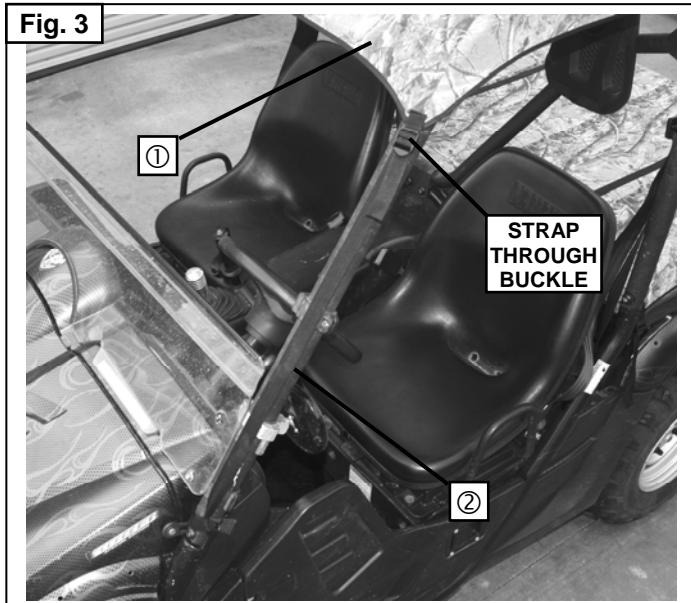

5. Feed the loose end of the front straps ② through the buckles as shown in Figure 3.

Fig. 4



6. Insert the aluminum tube ③ through the material pocket and place the ends between the vertical frame and the top (Fig. 4).
7. Tighten all straps evenly to secure the cover ① in place.

CARE AND CLEANING:

Wash using a mixture of mild soap and water. Hang to dry. Do not machine wash or dry.

CUSTOMER SERVICE:

For further information, see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.2 HRS