



INSTALLATION INSTRUCTIONS

Cargo Canopy Realtree Hardwood

SSV-5UG58-00-HD

YXR660FA (Rhino 660)

Cargo Box Mount Rail Kit Part Number SSV-5UG57-00-00 is required to complete this assembly.

⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury to yourself, or damage to the accessory or vehicle.

CAUTION:

- This installation should be performed by an authorized Yamaha dealer or a qualified mechanic. Some components require information from the model's service manual for proper installation or adjustment. Be sure to have the service manual on hand, if necessary, before proceeding with the installation.
- Alteration of emission-related components constitutes tampering under Federal and State laws and can lead to substantial fines and penalties if used other than in closed-course competition.

Dealer:

These instructions contain important information for future reference and *must* be given to the customer.

Warranty Information:

- Genuine Yamaha Accessory components are covered by a 90-day warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.
- The Yamaha Limited Warranty provided with new Yamaha vehicles has exclusions for certain failures, including those caused by competition or racing use (except YZ and WR motorcycle models) as well as by abnormal strain or abuse. While installation of these Genuine Yamaha Accessory components will not "void" your vehicle's warranty, specific failures adjudged by Yamaha to have resulted from the installation of accessory components or other modifications, or from competition use (except YZ and WR motorcycle models), may not be covered by warranty or Yamaha Extended Service.

1. Kit Contents:

This kit contains the following components, before beginning installation confirm there are no damaged or missing items.

Item	Part Number	Part Name and Description	Qty
1	*	Rhino Cargo Canopy	1
2	*	3/4" Tube, Aluminum	1
3	*	Wing Nut, Plastic	2
4	*	Bolt, Zinc Plate	2
5	*	Safety Snap Pin, Zinc Plate	4
6	*	Frame, Square, Aluminum	2

Item 1



Item 2



Item 3



Item 4



Item 5



Item 6




* Part is supplied with the kit only and is not a replacement item.

2. Installation:




- a) Tilt the dump bed by pulling the latch handle.

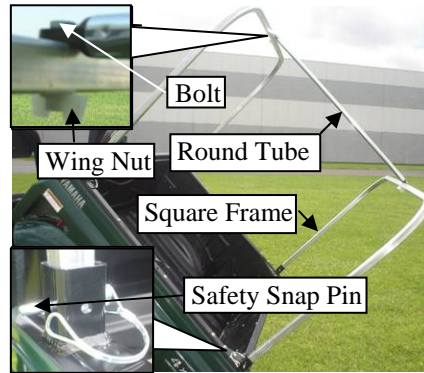


- b) Install the two frames into mounting rails, using safety snap pins to secure the square frames. Attach round tube between two square frames. Install bolts on top and wing nuts on the bottom.



- c) Drape the cover over the frames. Attach three J-clips on the front of the dump bed.

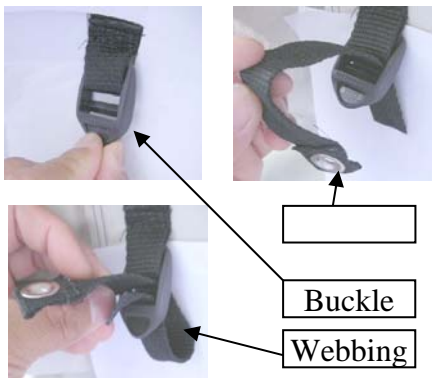

- d) Insert webbing to the buckle as shown.

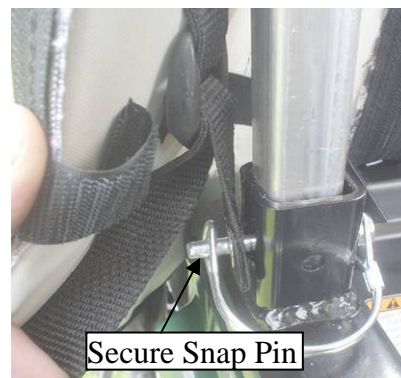

- e) Insert the grommets to the safety snap pins. Pull down all webbing to fit evenly. Secure the safety snap pins.



- f) Close the Velcro wraps around the square frames.

2) Maintenance, Care and Cleaning:

- a) Periodically check all fasteners for tightness, re-torque as needed. Do not store in direct sunlight, use a cover or store in shaded area. Storing in direct sunlight may result in fading of the material. Damage due to fading is not covered under the warranty. Do not machine wash dry. Do not use harsh detergents. To clean, rinse with cold water, and allow to air dry.