## **Arctic Cat Snowmobile**

Installation Instructions


## SPEEDSEAT PASSENGER MUFFS 4639-560

■ NOTE: Read these instructions thoroughly and carefully before beginning the installation process. Retain these instructions for future reference.

Check for the following parts before beginning installation: Instruction sheet, 1 Pair Speedseat Passenger muffs **INSTALLATION INSTRUCTIONS** 

- 1. Place the muff on the passenger handle as shown in pic. 1.
- 2. Pulling the muff against the handle, connect the front inner Velcro around the handle as shown in pic. 2.
- 3. Connect the outer velcro flap around the bottom of the passenger handle as shown in pic. 3.



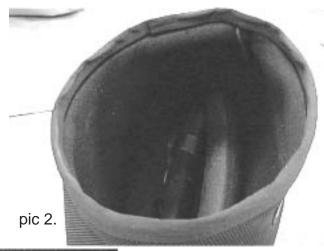



## CAUTION

Periodically check velcro connections and adjust as necessary.









Printed in the U.S.A. ®™Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701

IS2UPPASSENGERMUFFS/R0 9-11-06