



Installation Instructions RX-1 SEMI-RIGID TANK BAG Part No.SMA-8FA83-40-00 & SMA8FA834000CAN

Please read and understand the instructions completely before installation to avoid any possible injury to yourself or damage to the accessory or your snowmobile.

DEALER: These instructions contain important information for future reference and must be given to the customer.

1. PARTS LIST:



ITEM	PART NAME	DESCRIPTION	QTY.
1	INSTRUCTION SHEET	PAPER	1
2	POP RIVET	ZINC OXIDE	2
3	CAM BUCKLES	PLASTIC	2
4	SEMI-RIGID TANK BAG	FABRIC/FOAM MOLD	1

The instructions must be followed in the order specified below.

CLEAN & WAX THE TANK PRIOR TO INSTALLATION. ANY DIRT OR GRIME CAUGHT BETWEEN THE BAG AND THE TANK WILL CAUSE DULLING TO THE FINISH.

2. INSTALLATION:

- Remove the gas cap. Place the nylon loop around the filler neck.
- Reinstall the gas cap.
- Pulling the straps down evenly on both sides measure & mark where the center of the cam buckle falls on the tunnel.
- Using a 3/16" drill bit, drill the tunnel and install the cam buckle with the provided rivets. (See Fig. A)
- Feed webbing through cam buckle and cinch down checking for symmetry. Note cam buckle flips down to prevent loosening. (See Fig. B)

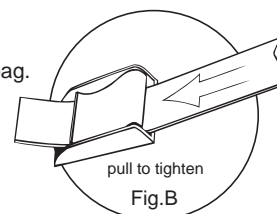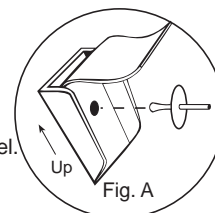

3. TANK BAG LOADING CONSIDERATIONS:

- NEVER OVERLOAD the tank bag. The LOAD LIMIT is 3 lbs.
- While your new tank bags are more water resistant than conventional tank bags they are not waterproof. In extreme conditions or with items that must be kept completely dry we suggest storing them in a plastic bag.
- DO NOT carry sharp, pointed or heavy objects in the tank bag.
- Periodically check and adjust connections as necessary.

4. CARE & CLEANING:

Use a "Vacuum cleaner", sponge or cloth and clean water. Do not use detergents or harsh chemicals.

5. CUSTOMER SERVICE: See your YAMAHA dealer.

ISSMA8FA834000/CAN/R0

6-10-03



Installation Instructions RX-1 SEMI-RIGID TANK BAG Part No.SMA-8FA83-40-00 & SMA8FA834000CAN

Please read and understand the instructions completely before installation to avoid any possible injury to yourself or damage to the accessory or your snowmobile.

DEALER: These instructions contain important information for future reference and must be given to the customer.

1. PARTS LIST:



ITEM	PART NAME	DESCRIPTION	QTY.
1	INSTRUCTION SHEET	PAPER	1
2	POP RIVET	ZINC OXIDE	2
3	CAM BUCKLES	PLASTIC	2
4	SEMI-RIGID TANK BAG	FABRIC/FOAM MOLD	1

The instructions must be followed in the order specified below.

CLEAN & WAX THE TANK PRIOR TO INSTALLATION. ANY DIRT OR GRIME CAUGHT BETWEEN THE BAG AND THE TANK WILL CAUSE DULLING TO THE FINISH.

2. INSTALLATION:

- Remove the gas cap. Place the nylon loop around the filler neck.
- Reinstall the gas cap.
- Pulling the straps down evenly on both sides measure & mark where the center of the cam buckle falls on the tunnel.
- Using a 3/16" drill bit, drill the tunnel and install the cam buckle with the provided rivets. (See Fig. A)
- Feed webbing through cam buckle and cinch down checking for symmetry. Note cam buckle flips down to prevent loosening. (See Fig. B)

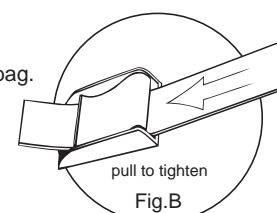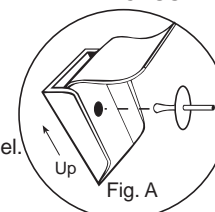

3. TANK BAG LOADING CONSIDERATIONS:

- NEVER OVERLOAD the tank bag. The LOAD LIMIT is 3 lbs.
- While your new tank bags are more water resistant than conventional tank bags they are not waterproof. In extreme conditions or with items that must be kept completely dry we suggest storing them in a plastic bag.
- DO NOT carry sharp, pointed or heavy objects in the tank bag.
- Periodically check and adjust connections as necessary.

4. CARE & CLEANING:

Use a "Vacuum cleaner", sponge or cloth and clean water. Do not use detergents or harsh chemicals.

5. CUSTOMER SERVICE: See your YAMAHA dealer.

ISSMA8FA834000/CAN/R0

6-10-03