



Installation Instructions VECTOR SADDLEBAG PART#SMA-8ES73-00-00


Please read and understand the instructions completely before installation to avoid any possible injury to yourself or damage to the accessory or your snowmobile.

DEALER: These instructions contain important information for future reference and must be given to the customer.

1. PARTS LIST:

ITEM	PART NAME	DESCRIPTION	QTY.
1	INSTRUCTION SHEET	PAPER	1
2	YAMAHA SADDLEBAGS	BALLISTIC NYLON	1 SET
3	POP RIVETS	ZINC OXIDE	4
4	CAM BUCKLE ASSEMBLIES	ACETAL PLASTIC	4
5	1" SR-1 SIDE RELEASE BUCKLE	ACETAL PLASTIC	2

Study the illustration thoroughly before proceeding.

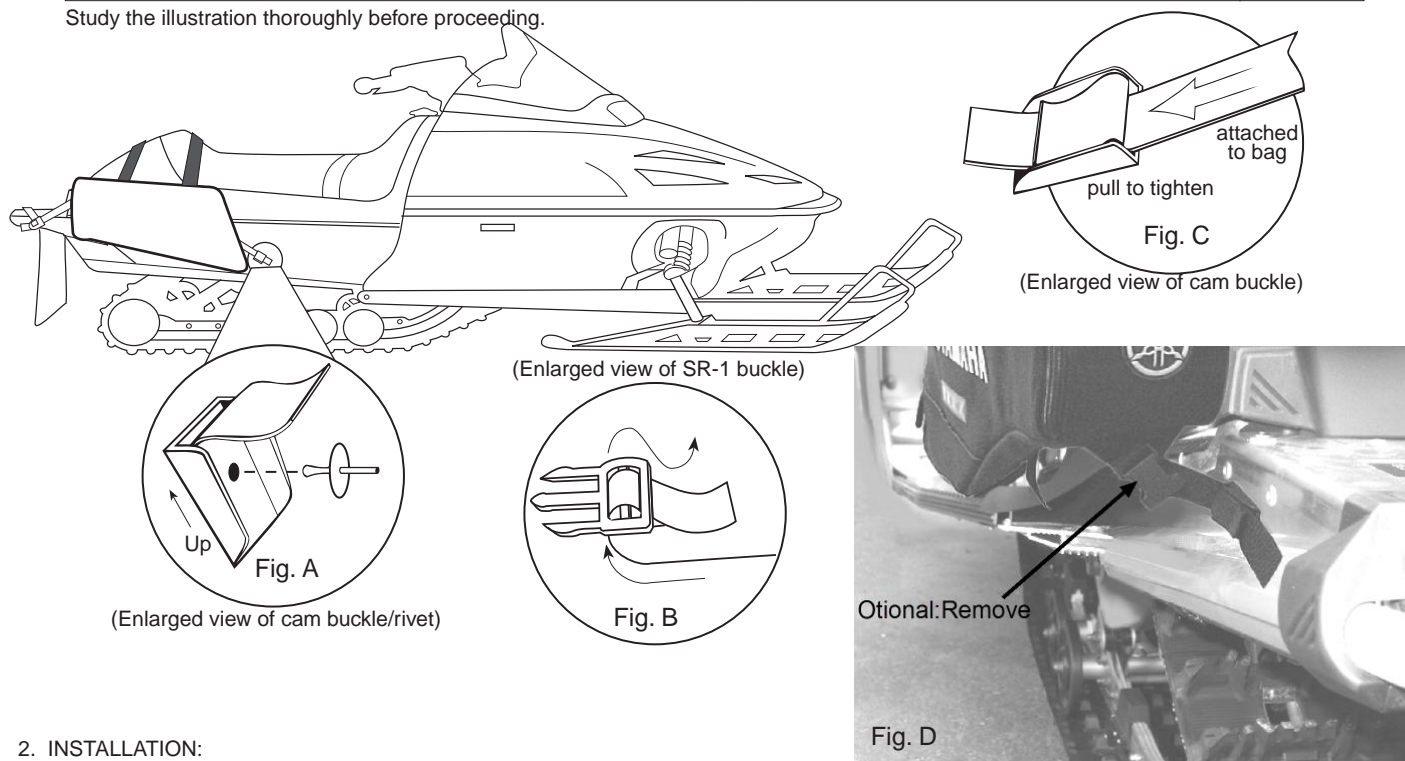

2. INSTALLATION:

- Thread the buckles as seen in Fig. B.
- Place bags over the rear seat hump, making sure that they are an equal distance from the running boards on each side, and square on the machine. Adjust the velcro straps if necessary. Be sure the bags do not rest on the running boards as this may result in pre-mature wear of the bags.
- Pull the front strap forward and down against the tunnel, mark the location where the center of the cam buckle will fall. This should be about 1.5" from where the webbing attaches to the bag.
- Using a 3/16" drill bit, drill the tunnel and install the cam buckle with the provided rivets. (See Fig. A)
- See Fig.B. -Lace the rear straps around the back bumper connect buckles.
NOTE: For extended tunnel applications: SEE Fig. D.
 - Cut off the the tab at the end of the webbing with the male buckle. Remove the male buckle from the strap.
 - Optional: With cutting pliers remove the female side release buckle from the strap.
 - Pull the rear webbing rearward and down against the tunnel and mark the location where the center of the cam buckle will fall.
 - Using a 3/16" drill bit, drill the tunnel and install the cam buckle with the provided rivets.
 - Feed the end of the webbing through the cam buckle.
 - Leaving enough webbing to pull the bag taught cut and sear the excess webbing.

3. SADDLEBAG LOADING CONSIDERATIONS:

- NEVER OVERLOAD the saddlebags. The LOAD LIMIT is 5 lbs. maximum per saddlebag.
- DO NOT carry sharp, pointed or heavy objects in the saddlebags.
- Distribute the load evenly between the saddlebags, packing the heaviest items in the bottom of the saddlebags. Keep the bottom of the bags from resting on the running boards.
- Use cinch straps to tighten load - Loose objects may be damaged or do damage to the bag.

4. CARE & CLEANING: Use a sponge or cloth and clean water. Do not use detergents or harsh chemicals.

5. CUSTOMER SERVICE: See your YAMAHA dealer.